INSTALLATION AND ADJUSTMENT INSTRUCTIONS

INSTALLATION

- 1. Use Figures (1-3) to determine the configuration that will be required.
- 2. Determine the correct hole pattern using Figure 2.
- 3. Mount the skimmer to the lockjaw using the hardware included.

ADJUSTMENT

- 1. Close the clamp lever (Figure 5).
- 2. Loosen both locknuts.
- 3. Adjust the rubber grips to the wall thickness of the tank or drum.
- 4. Tighten both locknuts.



90-days



For any technical questions or product support, please contact Zebra® Skimmers at 888.249.4855

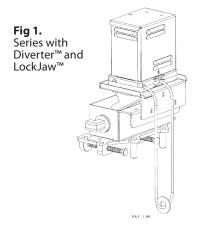


Fig 2. B-Series with LockJaw™

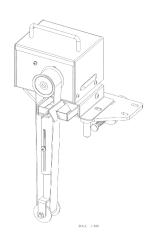


Fig 3.
ZVA with
Diverter™ and
LockJaw™

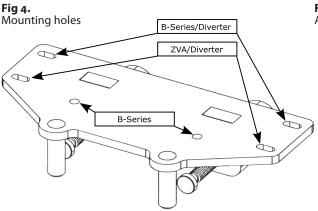


Fig 5. Adjustments

